




PLACE WATTLES ALONG SLOPE CONTOURS.

## **PROFILE**



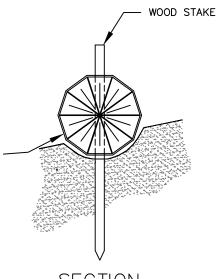

**SECTION** 

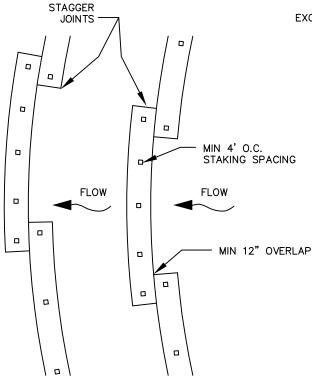

PLAN VIEW

## NOTES:

- STAKING SPECIFICATIONS:
  1"X2" WOODEN STAKES. MINIMUM STAKING AS SHOWN ON THIS DRAWING. ADDITIONAL STAKES MAY BE NEEDED ON DOWNHILL SIDE OF WATTLES, ON STEEP SLOPE, OR IN HIGHLY EROSIVE SOILS.
- 2. REMOVE ROCKS, CLODS, VEGETATION AND OTHER GROUND PROTRUSIONS SO THAT INSTALLED WATTLES HAVE DIRECT CONTACT WITH SOIL ALONG THEIR ENTIRE LENGTH.
- 3. INSTALL THE WATTLES IN A 2" DEEP TRENCH, INSURING THAT NO GAPS EXIST BETWEEN THE SOIL AND THE BOTTOM OF THE WATTLE. THE ENDS OF ADJACENT WATTLES SHALL BE OVERLAPPED AT LEAST 12 INCHES TO PREVENT SEDIMENT PASSING THROUGH THE FIELD JOINT.

OAK *LODGE	SEDIMENT BARRIER WATTLES					DRAWING NO.
I W A T E R S E R V I C E S	NO.	REVISIONS	DATE	BY	APPROVED	
	1					
	2					DATE: 02/18/2020
EROSION CONTROL STANDARD DRAWING	3					
	4				DISTRICT ENGINEER	SCALE: NTS